

How to set Auto Tracking?



Answer:

The camera automatically tracks an object that triggers the rule.

Note: Only some certain models support this function. Please see the actual model for details.

Note: This function, management page and supported alarm triggering and arming schedule may vary with models. Please see actual Web interface for details.

1. Click **Setup > Intelligent > Smart Settings**. Choose **Auto Tracking** and then click  .

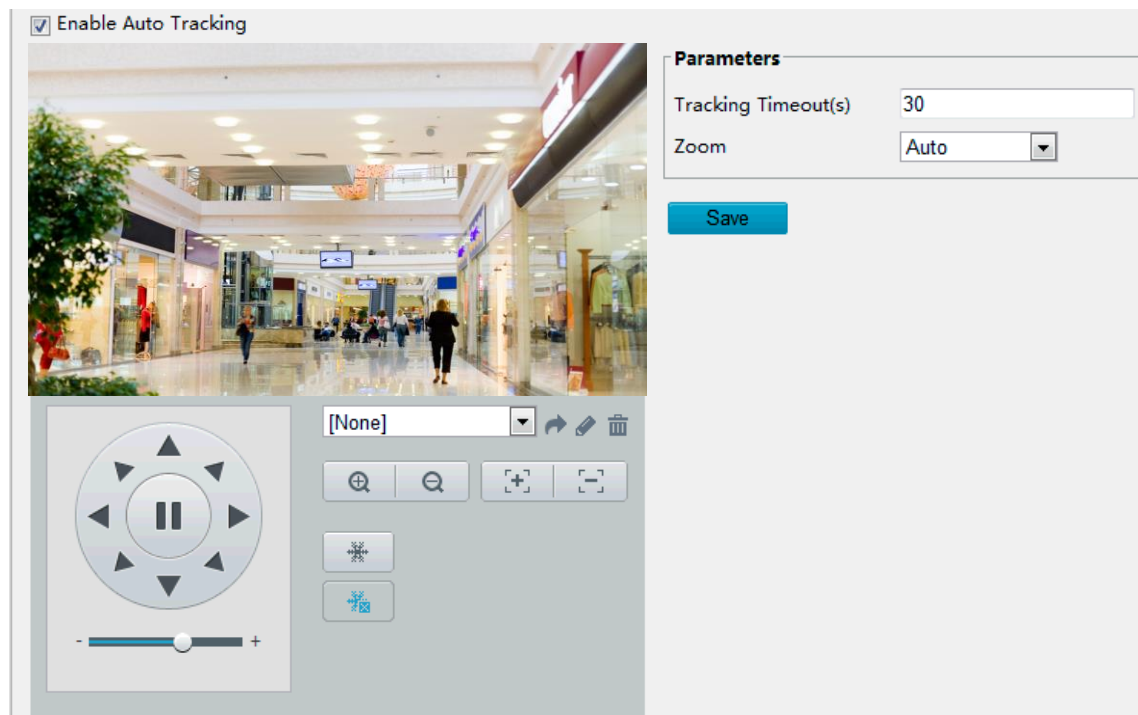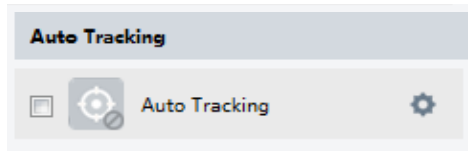

2. Set tracking timeout (unit: sec) and zoom ratio.
3. Click **Save**.