 


How to Set Up Auto Switching of a Uniview Camera's Scene?



How to Set Up Auto Switching of a Uniview Camera's Scene?

Description

Note: This method is applicable to most scenarios. If the method cannot solve your problem, it is recommended to consult our Tech Support Team. <u>https://global.uniview.com/Support/Service_Hotline/</u>

Operating Steps

Step 1 Set up different scenes on the camera.

Select a non-default scene, change **Common** to **Custom** and then name this scene.

No.	Current	Scene Name	Auto Switching	Setup
1	\bigcirc	<common></common>		Default Scene
2	۲	Test × V		📰 🖈
3	0	<common></common>		📰 🖈
4	\bigcirc	<common></common>		📰 🖈
5	\bigcirc	<common></common>		*

Adjust parameters for each scene in order to have a better image quality under different circumstances.

For example, scene 1 needs higher brightness and scene 2 needs lower sharpness.





Title:	How to Set Up Auto Switching of a Uniview Camera's Scene?	Version:	V1.1
Product:	IPC	Date	9/26/2023

Step 2 Set up different schedules for each scene.

Click the calendar to set up a schedule.

Scene	s			
No.	Current	Scene Name	Auto Switching	Setup
1	0	<common></common>		Default Scene
2	۲	<common></common>		📰
3	0	<common></common>		📰 🖈
4	0	<common></common>		📰 🖈
5	\bigcirc	<common></common>		📰 🖈

- Scenes							
Scene Name:	: <common></common>						
Schedule			Illumin	ation		PTZ Elevation	
08:00:00	L ~ 17:00:00	L	0	~ 0		0~0	
	∟~	L	0	~ 0		0~0	
	L~	L	0	~ 0		0~0	
	L~	L	0	~ 0		0~0	
Current Illumi	nation:24 🔿 Curr	rent Elev	vation:2°	ОК	Ca	ancel	

Step 3 Enable auto switching

Tick those scenes which need to be applied on this camera, and then click **Enable Auto Switching**.

No.	Current	Scene Name	Auto Switching	Setup
1	0	<common></common>		Default Scene
2	\bigcirc	Test 🗸 🗸		📰 🖈
3	۲	Test 2	\checkmark	📰 🖈
4	\bigcirc	<common></common>		📰 🖈
5	0	<common></common>		📰 🖈